

UniCeramica Care & Maintenance Guide

General Care

UniCeramica slabs are a durable, low-maintenance surface designed for everyday use. They are highly resistant to stains, scratches, heat, and moisture; however, regular cleaning and proper care will help maintain the appearance and performance of your surface for years to come.

Daily Cleaning

For everyday cleaning:

- Use a soft cloth, microfiber cloth, or non-abrasive sponge.
- Clean the surface with warm water and a mild pH-neutral cleaner if required.
- Wipe away spills as soon as possible to prevent residue build-up.
- Dry the surface after cleaning to maintain a streak-free finish.

Avoid using abrasive pads or harsh cleaning products that may dull the surface over time.

Removing Spills & Stains

UniCeramica is highly stain-resistant, but some substances may require additional cleaning:

- Food, grease, and oils: Use warm water with a mild detergent.
- Dried-on residue: Use a non-abrasive scraper suitable for porcelain surfaces.
- Hard water marks: Use a suitable stone-safe cleaner designed for porcelain.

Always test any cleaning product on a small, inconspicuous area before use.

Heat Resistance

UniCeramica slabs have excellent heat resistance. However:

- Avoid placing extremely hot cookware directly onto the surface for prolonged periods.

- Using trivets or heat mats is recommended to protect the surface and surrounding areas.

Scratch Prevention

While UniCeramica is highly scratch resistant:

- Avoid dragging heavy or sharp objects across the surface.
- Use protective pads under appliances or items with rough bases.
- Do not use the surface as a cutting board.
- Cleaning Products to Avoid

Do not use:

- Bleach or highly acidic chemicals
- Abrasive powders or creams
- Steel wool or abrasive scrubbers
- Strong alkaline cleaners
- Products containing wax or polishing agents

These products may leave residue or affect the appearance of the surface.

Outdoor & High-Traffic Areas

For outdoor or high-use applications:

- Sweep or rinse regularly to remove dirt and debris.
- Clean spills promptly.
- Avoid allowing dirt and organic material to build up over time.

Chipping Prevention

UniCeramica slabs are highly durable; however, the edges, corners, and cut-out areas require care as they can be more susceptible to impact damage.

To help prevent chipping:

- Avoid dropping heavy or sharp objects onto the surface, especially near edges and corners.
- Do not sit, stand, or place excessive weight on unsupported areas of the slab.
- Take extra care around sink cut-outs, cooktops, and exposed edges.

- Avoid hitting the surface with hard objects such as cookware, tools, or glass items.
- Use caution when moving heavy appliances or objects across the surface.
- Ensure any installation, handling, and fabrication is completed by experienced professionals using suitable equipment and techniques.

If a chip or impact occurs, stop using the affected area and contact your fabricator for advice on repair options.

Important Information

UniCeramica slabs are a manufactured product and may have natural variations in colour, texture, and finish between batches. Please always refer to the current available stock for the most accurate colour, pattern, and finish representation, as samples may vary slightly from the actual slabs.

Recommended Maintenance

With regular cleaning and correct care, UniCeramica slabs can maintain their beauty and performance for many years with minimal maintenance.